

AUDIO - AMPLIFIER

Denon 32706, 32134
 Durabrand 31568
 Halcro 31934
 Harman/Kardon 30892, 33045
 Left Coast 30892
 Marantz 32138, 30892,
 31892
 Memorex 31568
 Optimus 30823
 Parasound 31934
 Philips 30892
 Pioneer 30823
 Polk Audio 30892
 RCA 30823
 Regent 31568
 Sony 33903
AUDIO - ACCESSORY
 Apple 31115
 AudioSource 33721
 B & W 33943
 Bose 33708
 Boston 33698
 Acoustics
 Bowers & Wilkins 33943
 Curtis 33942
 Definitive 33645
 Technology
 Denon 32502
 Dynavox 33231
 Haier 33516
 Harman/Kardon 33517
 iLive 33175
 Insignia 33951
 JBL 33756, 33535
 JVC 33049
 Klipsch 33915

LG 33217, 33996
 Martin Logan 33526
 Onkyo 33984, 33992
 Panasonic 33323, 33409
 Philips 33962, 32675,
 33282, 34012
 Pinnacle 33774, 33728
 Speakers
 Pioneer 33956
 Polk Audio 33429
 Proficient 33661
 RCA 33969
 Samsung 32660, 32609
 Sharp 33736, 33097
 Sonos 33919
 Sony 33700, 32610
 SpeakerCraft 33661
 Toshiba 33627
 VIZIO 32454
 Yamaha 32458, 32021,
 33153, 33917
 ZVOX 32332, 33913,
 32334

AUDIO - RECEIVER

Aiwa 30121, 31641,
 30158, 30189
 Alco 31390
 AMC 31077
 Anthem 33294
 Anthem 33294
 Statement
 Arcam 31189, 30189
 Audiotronic 31189
 Audiovox 31390
 Bose 31933, 31629,
 33959

Carver 30189, 30121,
 31189
 Coby 31389, 32748,
 33218
 Curtis 31389
 Denon 32857, 31360,
 32516, 33347,
 32820, 32279
 Dynex 32971
 Epworth 30121, 31641,
 30158, 30189
 Gateway 31517
 GE 33297
 General Electric 33297
 Harman/Kardon 32241, 31304,
 32443, 33418,
 30189, 32670
 Insignia 32175, 31030,
 32169, 32472,
 32929, 32966,
 33210, 31077
 Integra 31805, 32730,
 31320, 32503,
 30135, 31298
 JBL 32241
 Jensen 31389
 JVC 31676, 32040,
 31374, 32331,
 32239, 31871,
 33115, 33274
 Kenwood 31570, 31313,
 30186, 31293
 KLH 31390
 LG 32197, 32676,
 32284, 33285,
 31293
 Linn 30189

Magnavox	30189, 31189, 31831	Thorens	31189	Baysonic	00180
Marantz	31289, 32114, 30189, 31189	Toshiba	31788, 31123	Bell & Howell	00154
McIntosh	31289	Venturer	31390	BGH	04029, 00898, 04070, 02414, 00876, 03485, 04028, 04030
Micromega	31189	Vtrek	32426		
Myryad	31189	Wards	30158, 30189	Blue Sky	02153, 03997
Nakamichi	31313	Yamaha	32061, 32467, 33030, 30176, 31276, 30376, 33580, 31815, 31376, 30186	Bradford	00180
Norcent	31389			Britânia	02414
Nova	31389			Broksonic	00463, 01935, 01938, 01892
Onkyo	31805, 31320, 32730, 32503, 30135, 31298	Zenith	31293, 32197	CCE	03782, 04091, 00623, 04092
Optimus	31023, 30186	TELEVISION		Celera	00765
Panasonic	32967, 31275, 31288, 31633, 32452, 33055, 33309, 31763, 32745, 32105, 31308, 31676	888	04159	Champion	01362
		Acer	01339, 04143	Changhong	03814, 00765
Philco	31390, 31831	Admiral	04030, 03485, 04111, 00093, 00463	Cineral	00451
Philips	30189, 32459, 31831, 32289, 31266, 32311, 31189	Advent	00761, 01570	Citizen	01935
		Affinity	03717, 03716, 03870, 03577	Clarion	00180
Pioneer	31123, 31935, 31384, 32432, 31023, 32612	Aiwa	01362	Claris	03807
		Akai	00702, 01675, 00812, 01385, 00672, 01935, 00765	Coby	03478, 03627, 02315, 02344, 02306, 02314, 02345, 01634, 02338, 02326, 02340, 03629, 01538, 02347, 02348, 03202
Polk Audio	31289, 30189	Alfide	00672	Commercial	01447
Proscan	31254	America	04179	Solutions	
RCA	31254, 32041, 32611, 32426, 33297, 32655, 31123, 31390, 32719, 33281, 31023	America Action	00180	Contec	00180
		Anam	00180	Contex	04053
		AOC	01589, 03720, 01365, 02014, 04170, 02087, 02402, 01590, 02479, 02621, 04184, 04185, 03707, 04101, 04169, 04173	Continental	01682, 03321, 04179
Samsung	31868, 32809, 33154, 32137, 31500, 31304			Continental	03322, 03321
		Aomni	01623	Electric	
Sansui	30189	Apex Digital	00765, 02397, 00748, 01217, 00890	Coradir	02844
Sharp	30186			Craig	00180, 03423
Sherwood	31077, 31905, 31517, 32169, 33120	Ario	02397	Crown	00180, 00672
		Astar	01738, 01531	Crown Mustang	00672, 00898
Sherwood	32169	Asus	03340	Curtis	03577, 02855, 03121, 02466, 02352, 03895, 02397, 03939, 01326, 03636, 04035, 01314, 02559, 03228, 03382
Newcastle		Atvio	03638, 03636, 03653		
Sony	31622, 31759, 30158, 32172, 31758, 31822, 32475, 31058, 32522, 32860, 33257, 33372, 33456	Audinac	00180	Curtis Mathes	00451, 00702, 01661, 00093, 00145, 00154, 01347
		Audiovox	02413, 01865, 00180, 01564, 01868, 01276, 01766, 01769, 02121, 03065, 00451, 00623	CXC	00180
Stereophonics	31023			Cytron	01326
Sunfire	31313	Auria	02087, 02014, 02277	Daewoo	01661, 00623, 00451, 00661, 00672, 00154
Teac	31390				
Technics	31308, 31633	Aventura	00171		

Daytek	02241		00051, 00178,		00171, 00463,
Dell	01403, 01863,		00765		01385, 01660,
	01264	General	00451, 01547,		01963, 02184,
Denon	00145	Electric	01447, 01347,		02416, 02751,
Digital	01765		00051, 00178,		03227
Lifestyles			00765	Inteq	00017
Disney	01892, 01665	GFM	00171, 01665,	iRIS	02189
Dukane	01398		01963, 01886,	IRT	00451, 01661
Dumont	00017		01864, 01865	iSymphony	03429, 03382,
Durabrand	00463, 00171,	Gibraltar	00017		03118, 03094,
	01570, 01665,	GoldStar	00178		03863
	00178, 00180	GPX	03980, 03977,	JC Penney	01347, 00051,
Dynex	02049, 01463,		03196		00178, 00156
	02184	Gradiente	01369, 01029	JCM	02189, 02256
Electrograph	01755, 01623	Grundig	00672	Jensen	01326, 03204,
Electrohome	00463, 01570,	Grunpy	00180		00761
	01670	Haier	01749, 02309,	JVC	01774, 01601,
Electron	02466, 02855		01748, 03382,		02321, 02271,
Elektra	00017, 01661		01753, 03429,		01253, 00053,
Element	03559, 01687,		02293, 02876,		03650, 00463,
	02183, 02964,		03987, 04120,		01670, 03841,
	01886		01570, 03204		04070, 02264,
Elite	03867	Hallmark	00178		00650, 01892
Emerson	01864, 01394,	Hannspree	01348, 02786,	KC	04182
	03623, 00171,		01351	KDS	01498, 01687
	00463, 01963,	Harvard	00180	KEC	00180
	00180, 01913,	Havermy	00093	Ken Brown	04056, 04099
	01886, 00178,	H-Buster	03620, 03419	Kioto	00785
	01944, 00623,	Helios	00865	KLH	00765
	01661, 01665,	Hello Kitty	00451	Kolin	01240
	02183, 00451,	Hewlett	01642	Konka	01939, 01385
	00154, 03559	Packard		Kreisen	00876
Emprex	01765	Himitsu	04179, 00180	KTV	00180
Encross	00876	Hisense	03519, 02183,	Legend	02397, 02309
Envision	01589, 01365,		01660, 02098,	Lexus	03638
	02087, 02014,		01314, 00748,	LG	02731, 01423,
	02621		03382, 04029		01859, 02358,
Epson	01122	Hitachi	01643, 03644,		00178, 03941,
Epworth	01362		00145, 01145,		03397, 04017,
EQD	02014, 02087,		01345, 03639,		02424, 01265,
	02277		02433, 03697,		03979, 01753,
EQD Auria	02014, 02087,		00679, 02215,		00017
	02277		02981	LodgingStar	03147
ESA	00812, 00171,	Hitech	01682, 01814,	LXI	00154, 00156,
	01944, 01963		04179, 04183		00178, 00017,
	01326	Hiteker	03118		01347
Fair Mate	03382	HP	01642	MAG	01687, 01498
Favi	00154, 01362	Hyundai	03418, 01814	Magnasonic	01913
Fisher	02964	iLo	01665, 01684,	Magnavox	01866, 03623,
Fluid	02231		01990, 01463,		02372, 02597,
Frigidaire			01286, 01394		01454, 01913,
Funai	01864, 00171,		04183		01944, 01963,
	00180, 01271,	Imperial	01990		01455, 01990,
	01394, 01963	Initial	02049, 01641,		03708, 00171,
Futuretech	00180	Insignia	01564, 01326,		01365, 00051,
Gateway	01755, 01756		02002, 01423,		01755, 01867
Gateway	00451, 01547,		01892, 01517,	Magnum	04179
GE	01447, 01347,				

Marantz	01398, 01454		03134, 03327,		04035, 01687,
Matsushita	00051, 00250,		03767, 03835		02121, 00765,
	00650	Norwood Micro	01286		00865, 01314,
Maxent	01755, 01757	NuVision	02158		01766, 04074,
MB Quart	01868	Ölevia	01610, 01240,		01286, 01326,
Megatron	00145, 00178		01331, 01144		02002
Memorex	00463, 01570,	Onwa	00180	Portland	01661, 00451
	01670, 01938,	Optimus	00250, 01927,	Prima	01753, 00761,
	00178, 01892,		01913, 01924,		01749
	01665, 00150,		00154, 00650,	Prism	00051
	00154, 01687,		00679	Proscan	02183, 03382,
	01924, 01927	Optique	02189		03577, 02256,
MGA	00150, 00178	Optonica	00093		01447, 03332,
Microsonic	01326, 02483,	Orion	00463, 01463,		03717, 03895,
	03328, 03419,		01938, 03485,		03939, 01347,
	03679		01892, 03540,		02147, 02746,
Midland	00017, 00051		03650		03429, 03636,
Mintek	01990	Panasonic	01480, 01291,		04035
Miray	03847, 02414,		00250, 00650,	Proton	00178
	02429, 03183,		02264, 00051,	Proview	01687, 01498
	04176, 04177,		01927, 01947,	Pulsar	00017
	01814, 03322,		01636, 01924,	Pyle	02196
	00785, 03485,		01941, 03825,	Pyle Home	02196
	04178, 00898,		00053, 00093,	QuantumFX	02337
	03309, 03321		00145, 00150,	Quasar	00051, 00250,
Misakai	00171		00154, 00156,		01291, 01927,
Mitsubishi	01250, 00150,		00178, 01271,		01924, 03899,
Electric	00178, 01797,		01347		00650
	00093	Panavideo	03679	RadioShack	00180, 00178,
Mitsui	04179, 03658,	Panavox	04057		00154
	03638	PARK	02104	RCA	02746, 02932,
Motorola	00093	Penney	01347, 00051,		02434, 01447,
Multitech	00180		00178, 00156		04214, 02247,
NAD	01156, 00156,	Philco	03426, 02414,		03577, 01781,
	00178		03639, 03697,		02187, 03382,
Naxa	02104, 04093,		01665, 00171,		01547, 01347,
	03154, 03382,		01029, 01271,		03717, 03332,
	03423		01963, 01394,		00679, 02403,
NEC	01797, 01704,		01661, 00145,		01661, 02429,
	01398, 00876,		01362, 00463		03147, 03378,
	02293	Philips	01867, 02372,		03419, 00093,
NetTV	01755		01454, 01455,		01385, 01868,
New Acoustic	01156, 00156,		02374, 02597,		02002, 02183,
Dimension	00178		02708, 01744,		02855, 03938,
NEX	01814		01866, 02622,		03939, 00051,
Nexus	02183		00690, 00017,		00090, 03121,
Electronics			03623, 00171,		03636, 04093
Nikko	00178, 00017,		01944, 01365,	Realistic	00154, 00180,
	01347, 00154,		01990, 01394,		00178
	00156		01589	Recco	03847, 00898,
Nimbro	02104	Pioneer	01457, 00679,		01814, 03183
Noblex	01362, 03697,		01260, 01398	RevolutionHD	01623
	04029, 03803,	Planar	00679, 01589	Runco	01398, 00017
	04030, 00154	Polaroid	01523, 01769,	Sampo	01755
Norcent	01365, 01589,		01498, 01276,	Samsung	02051, 00812,
	00748, 01590		01538, 01385,		01632, 03993,
Nordmende	03419, 03861,		01767, 03942,		00702, 00766,

	00650, 00178		02528		01330, 01627,
Sansei	04030, 00451	Superscan	00864, 01944,		01640, 01755,
Sansui	00463, 01892,		00093, 00171,		02049, 02111,
	03540, 01670,	Supersonic	03593, 03154,		02277, 00885,
	01935, 01463,		01753, 02104,		01542, 01564,
	03564, 01938,		03595, 03204,		01578, 01742,
	01409, 04053,		03894		01365
	03377, 00171,	SVA	00748, 00865,	Viore	02352, 03382,
	03559		01963		03118, 03429,
Sanyo	01142, 01362,	Sylvania	01864, 01886,		02104, 03863,
	00154, 03488,		00171, 01963,		03094, 01684,
	03697, 03861,		01944, 01913,		03594, 03154
	00799, 00088		01394, 01665,	VisionQuest	03154
Sceptre	03899, 02528,		01271, 01314	Vivitek	01369
	02337, 01217,	Symphonic	00171, 01913,	VIZIO	01758, 03758,
	01360, 04139,		01944, 01963,		02707, 02757,
	00878		01394, 00180		03415, 02512,
Scotch	00178	Syntax	01610, 01240,		01756, 00864,
Scott	00178, 00180		01144, 01331		00885
Sears	00154, 00156,	Tandy	00093	Vuon	03418
	00171, 00178,	Tatung	01286, 01756	Wards	00178, 00017,
	01547	TCL	02434, 03183,		00156, 00051,
Seiki	03953, 02964,		02429, 03426,		01156, 01347,
	03559, 03560,		03847, 04176,		00154, 00180
	00178		04177, 02414,	Waycon	00156
Seiko Epson	01122		03047, 00898,	Westinghouse	01712, 03579,
Seleco	01351		02403, 04178		03382, 00885,
Semivox	00180	Technics	00051, 00250,		01300, 03949,
Semp	01743, 00156		00017, 01347,		02293, 03094,
Semp Toshiba	01743, 03793,		00650		03470, 00889,
	03469, 00156	Techwood	00051		00890, 01282,
Sens	01865	Teknika	00180, 00150		02397, 03908,
Serie Dorada	03814	Telefunken	02414, 00702,		00451, 00463,
Sharp	02360, 00818,		04025		01217
	02951, 03394,	TMK	00178	White	00623, 01661,
	01602, 02402,	TNCi	00017	Westinghouse	00463, 01913
	03867, 00093	Tophouse	00180	Wyse	01365
Sheng Chia	00093	Toshiba	01524, 01656,	Xoceco	01753, 00761,
Sigmac	03477, 03423		02724, 00156,		01749
Silo	03794, 03477,		03134, 01156,	Zenith	00017, 00178,
	04182		01256, 02006,		01145, 01265,
Silo Digital	03794, 03477,		01935, 01945,		01859, 01423,
	04182		02684, 01743,		00145, 01661,
Siragon	04057		03469, 01704,		02731, 01365,
Solé	01623		00650, 01369,		02358, 00463
Soneview	04179		01265, 00093,		
Sony	00810, 01300,		00154	TV COMBO	
	01685	TruTech	01665, 01723	Admiral	00463
Soundesign	00178, 00180	TVS	00463	Advent	01570
Soyo	01520	Upstar	04182	Affinity	03870, 03717
Spectroniq	01498, 01687	US Logic	01286	Akai	01675, 01935
Speler	04041	Venturer	01865, 01868	America Action	00180
Squareview	00171	Victor	00053	AOC	04173
SSS	00180	Vidikron	01398	Apex Digital	00765
Starlite	00180	Vidtech	00178	Astar	01531
STI	03793	Viewsonic	02014, 02087,	Audiovox	01865, 02413,
SunBriteTV	02337, 01610,		03706, 00864,		00180, 01766,

	01769, 03065, 01868	Magnavox	02597, 01913, 01963, 01944,	Sylvania	03894 01963, 01944,
Blue Sky	02153		02372, 01866,		01913, 01886,
Broksonic	00463, 01935, 01938		03708, 01454,		01864, 01394
Citizen	01935	Memorex	00051, 01990	Symphonic	01913, 01944, 01963
Coby	02315, 02344, 03627, 02340, 01538, 02347, 03202, 02314		01938, 00463, 01670, 01924, 01927	Toshiba	02006, 01935, 01945, 02684, 03469, 01524, 00156, 01256, 01656
Continental	03321	Mintek	01990		
Electric		Mitsubishi	00093, 00150,	Venturer	01865, 01868
Coradir	02844	Electric	00178	Viewsonic	02049, 00864
Curtis	02855, 03895, 02466, 04035, 02559, 03636	Naxa	02104, 03382	Viore	03429, 02352, 03094, 02104, 03382, 03118
		Nikko	00154		
Daewoo		Nimbro	02104	Westinghouse	01300, 01712
Durabrand	00463, 00171	Nordmende	03835	White	00463, 01913
Dynex	02049, 02184	Optimus	01927, 01913, 01924	Westinghouse	
Electrohome	01670	Orion	01938, 01463	Xoceco	01753
Element	02964	Panasonic	01927, 01947, 01924, 01941,	Zenith	00017, 00178
Emerson	01886, 01864, 01963, 01913, 00463, 01944, 01394, 00171		00250, 01291, 01636, 01480, 00051, 00093, 00178, 03825	VIDEO - VCR	
ESA	01944, 01963	Philco	01963	Humax	20739
Favi	03382	Philips	02597, 01394, 01455, 02372	Philips	20739
Funai	00171, 01394, 01963	Polaroid	01769, 01523, 01538, 03942, 01766, 04074, 02002	TiVo	20739
GE	00051		02002	VIDEO - DVD	
General	00051		02002	Accurian	20675, 21416
Electric		Prima	01753	Alco	
GFM	01963	Proscan	02256, 03895, 03429, 03636	Allegro	20869
GoldStar	00178		02196	Amvox	22840
GPX	03980, 03977, 03196	Pyle	02337	Apex Digital	20672, 20717
Haier	01753, 02309, 03429, 01749, 01748	QuantumFX	00051, 01927, 01924, 00250	Asahi	22615
		Quasar	04214, 02187, 02746, 02932, 02247, 00093,	Audio Authority	22555
Hisense	03519	RCA	01868, 02002, 03382, 00051, 01447	Audiovox	20717
Hitachi	03644		01924, 00250	BBK	21224
iLo	01990		04214, 02187, 02746, 02932, 02247, 00093,	Bel Canto	21571
Initial	01990		01868, 02002, 03382, 00051, 01447	Design	
Insignia	02049, 01641, 01963, 02002, 02416, 02751, 03227, 01326, 01517, 01892	Samsung	02051	Blaupunkt	20717
		Sansui	01670, 01935, 03564, 01938, 03377	BuBuGao	21224
iSymphony	03429, 03094		03377	California Audio	20490
JVC	02271, 01601, 01670, 01774, 01253	Sanyo	03488	Labs	
		Sceptre	02528, 04139, 02337	Cinea	20831
Ken Brown	04099	Sens	01865	CineVision	20833, 20869
Konka	01939	Sharp	00818, 00093, 02360	Coby	22494, 22746, 21351, 20672
LG	02731, 01423	Superscan	01944	Cougar	22693
LXI	00154	Supersonic	03593, 01753, 02104, 03595,	Craig	20831
Magnasonic	01913			Curtis	22235, 23052
				Curtis Mathes	22331, 23925
				Daewoo	20833, 20869
				Days	22857
				Denon	22258, 22748, 20490
				DigitalMax	21738
				Diplomat	22814

Directed Video	20717	Microsoft	22083, 22627,	Sony	21516, 21633,
Disney	20675, 21270		20522		21033, 20864,
Durabrand	23464	Mintek	20717		21070, 20772
Dynex	22596	NAD	20741	SV2000	20675
EletoVision	22822	Naxa	22235	Sylvania	20675
Emerson	20675, 22213	Nesa	20717	Symphonic	20675
Fisher	20670	New Acoustic	20741	TCL	22587
Funai	20675	Dimension		Teac	
Gateway		NKS	22834	Technics	20490, 20703
GE	20717, 20522	Ölevia	22331	Toshiba	23157, 22705,
General	20717, 20522	Onkyo	22147, 21627,		20503, 23857,
Electric			20503, 21769		22277, 22006,
GFM	20675	Oppo	22545, 21224		21510, 21769,
Go Video	20869, 21044,	Panasonic	21641, 23641,		21608
	20741, 21075,		20490, 21579,	TruTech	20675
	20744, 20833,		20703, 20503	Urban	20503
	20717	Philco	20675,	Concepts	
GoldStar	20741, 20869	Philips	22056, 22434,	Venturer	
GPX	22235		20646, 21354,	VIZIO	22563
Greenhill	20717		20539, 21506,	Vtrek	22587
Grundig	20539		23488, 20503,	WB Electronics	22555
Harman/Kardon	20702, 20582,		22084, 20675	Xbox	22083, 22627,
	21229, 22927,	Pioneer	22442, 22854,		20522
	23228		21571, 20142,	Yamaha	22298, 20497,
Hello Kitty	20831		20631		20539, 20545,
Hitachi	20664, 20573	Polaroid	21013		20490, 21354,
Hiteker	20672	Polk Audio	20539		20646, 23837,
Initial	20717	Presidian	20675, 21738		21416
Insignia	22596, 22095,	Proceed	20672	Zenith	20741, 20869,
	22428, 20675,	Proscan	20522		20503
	21013, 20741	RCA	20522, 21013,		
Integra	22147, 21769		22919, 22587,	BLU-RAY DISC	
Irradio	20646		22213, 20717,	Curtis Mathes	22331, 23925
JBL	20702		22871, 21769,	Denon	22258, 22748
JVC	22365, 22855,		23464	Harman/Kardon	22927, 23228
	20623, 21164,	RE-BL	22555	Insignia	22596, 22428,
	20867, 21602	Rio	20869		20675
Kawasaki		Rotel	20623	Integra	22147
Kenwood	20534, 20490	Samsung	20199, 20573,	JVC	22365, 22855
KLH	20717		22069, 21075,	Lexicon	22545
Konik	22691		21573, 21470,	LG	21602, 20741
Lenoxx	22213		22113, 22269,	Magnavox	20675
Lexicon	22545		22369, 22329,	Marantz	22414, 23444
LG	21602, 20741,		22489, 21044,	Memorex	22331
	20869, 22135		22843, 22556,	Microsoft	22627
LiteOn	21738, 21416		20744, 20490	Ölevia	22331
Logitech	22639	Sanyo	20670	Onkyo	22147
Magnavox	20675, 21354,	Schneider	20646	Oppo	22545
	20503, 20646,	Semp	20503	Panasonic	21641, 23641
	23488, 21506,	Semp Toshiba	20503	Philips	22434, 22084
	20539	Sensory		Pioneer	22854, 22442,
Marantz	22481, 20539,	Science			20142
	22414, 23444	Sharp	20630, 22250,	RCA	23464
	21273		20675	Samsung	20199
McIntosh	22213, 20831,	Sherwood	23052, 23837,	Sharp	22250
Memorex	23153, 21270,		23925	Sherwood	22052, 23837,
	22331	Sonic Blue	20869		23925

Sony	21516, 20772
Sylvania	20675
Toshiba	23157, 23857, 22705
VIZIO	22563
Xbox	22627
Yamaha	22298, 23837